



Product #6664

TechNiche Phase Change Cooling
CROWN COOLER INSERTS
Powered by CoolPax™

- Use additional inserts for continuous relief from the heat
- Inserts sealed in high strength polyurethane
- Compatible with 6622 Phase Change cooling Crown Cooler powered by CoolPax™


POWERED BY

COOLPAX™

CoolPax™ is our Phase Change Material (PCM) cooling technology. It uses a non-toxic liquid that freezes at 58°F/14°C and remains at that temperature for up to 1 hour.

HOW TO USE :

1. Place CoolPax™ inserts in freezer or ice water for 35-40 minutes
2. Insert activated CoolPax™ into garment pockets
3. CoolPax™ vest or accessory is ready to wear!

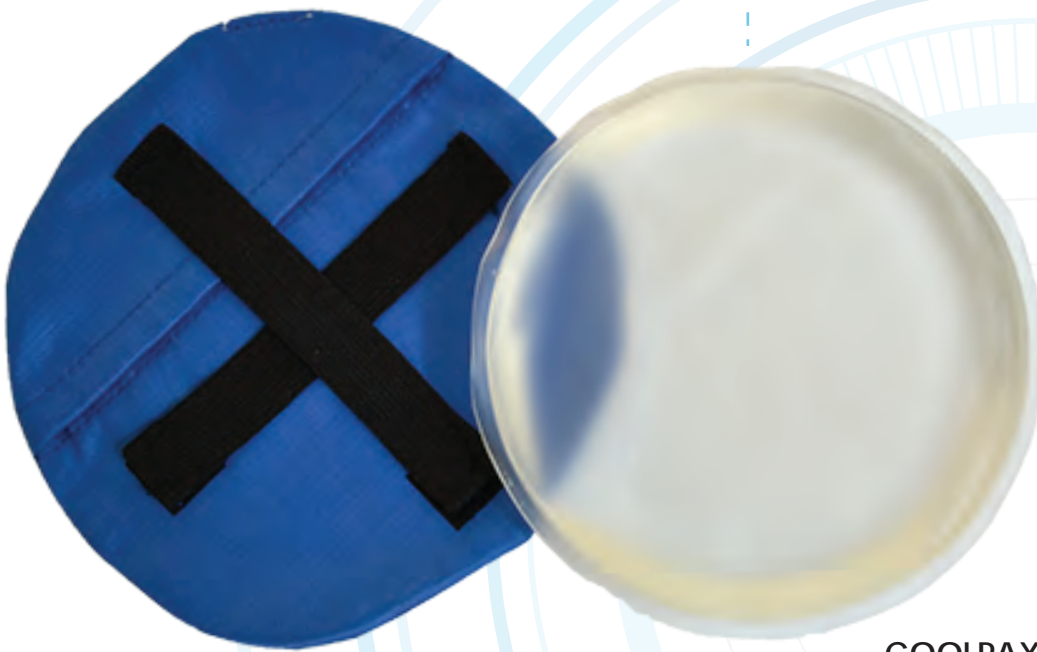

COOLPAX™ Inserts

Polyurethane Outer Material
Phase Change Material: 58°F
Activation: Ice Water or Refrigerator
Activated Duration: up to 1 hour